

Konnect Jupiter3 VHTS Installation Guide



DISCLAIMER: THIS GUIDE IS DESIGNED FOR USE BY TRAINED PROFESSIONALS ONLY. ALL NATIONAL ELECTRICAL CODES AND ALL HEALTH & SAFETY REGULATION PERTAINING TO SATELLITE ANTENNAE INSTALLATION MUST BE RESPECTED. KONNECT AND EUTELSAT GROUP ARE NOT RESPONSIBLE FOR ANY HARM OR DAMAGE THAT MAY RESULT FROM THE USE OF THIS GUIDE WITHOUT PROPER TRAINING AND DUE CARE.

GLOSSARY

Pointing	Finding the correct position of the antenna towards the service satellite in the sky in order to receive broadband signals
Line of sight	Direction of the antenna to the satellite
Beam	A spot beam is a satellite signal that is specially concentrated in power, allowing to transmit different data signals using the same frequency for different geographical locations. Konnect VHTS is a multi-beam satellite, with each beam serving a specific area on the earth's surface.
Elevation	Vertical angle between the pointing direction towards the satellite and the local horizontal plane
Azimuth	Horizontal angle measured in the local horizontal plane in a clockwise direction from north. It refers to the rotation of the whole antenna to the vertical axis of the pole
Polarization	The way a radio electric frequency propagates. The system uses circular polarisation where electromagnetic waves rotate around the propagation direction either right (RHCP) or left (LHCP)
Transceiver	Unit at the end of the antenna that converts the signal frequency between the satellite signal and the Terminal.

Table of Contents

KONNECT VHTS TERMINAL OVERVIEW

Installation Kit	page 4
Installation Tools	page 5
System Assembly	page 6
Transceiver	page 7
IDU/ODU Association	page 8
Antenna Control Bolts	page 10

INSTALLATION STEPS USING THE PC

Part 1: Preparing the Install	page 11
Part 2: Selecting the Location	page 12
Part 3: Assembling the System	page 13
Part 4: Connecting the System	page 13
Part 5: Programming the Terminal	page 14
Part 6: Pointing the Antenna	page 16
Part 7: Commissioning the Terminal	page 18
Part 8: Wi-Fi Connectivity	page 19

INSTALLATION METHOD USING THE APP

Installing and Pointing with the Konnect VHTS Install App	page 20
--	---------

ANNEX

- **Terminal Swap Procedure** page 22
- **Relocation Procedure** page 22
- **Troubleshooting Table** page 23

Fig.1 - INSTALLATION KIT

(parts included in the kit)



1.1 - Antenna Reflector (74cm)

- Reflector
- Antenna Arm
- Bolts/Nuts Box



1.2 - Antenna Canister (74cm)

- Tilt Plate
- Reflector Bracket
- AZ/EL Canister



1.3 - Antenna Transceiver (HT3200 - 2W)



1.4 - TERMINAL Wi-Fi (WR3200) or without Wi-Fi (WE3100)

- TERMINAL WR3200/WE3100
- Power Supply
- Ethernet Cable



1.5 - Coax Cable (30m)

(To verify if available in the ordered kit)

- RG6 Outdoor 30m Coax Cable
- Waterproof Compression Connector
(already compressed on the cable)
- Push-On Compression Connector
(to Terminal, no need of compression tool)



1.6 – Tri Mast

(To verify if available in the ordered kit)

- 6 Anchor Bolts
- 60mm Mast
- Mounting Kit

Fig.2 - INSTALLATION TOOLS

(not included in the kit)

2.1 Antenna Assembly



11mm spanner



13mm spanner



3mm L-key



Cross screwdriver

2.2 Cables & Connectors



Cable Cutter



Cable Stripper

2.3 Terminal Connection & Antenna Pointing



Smartphone



Compass



Laptop

2.4 Mount Fixation



Level




M8 Bolts




Driller

Fig.3 - SYSTEM ASSEMBLY

3.1 Reflector Bracket and AZ/EL Canister assembly (74CM)

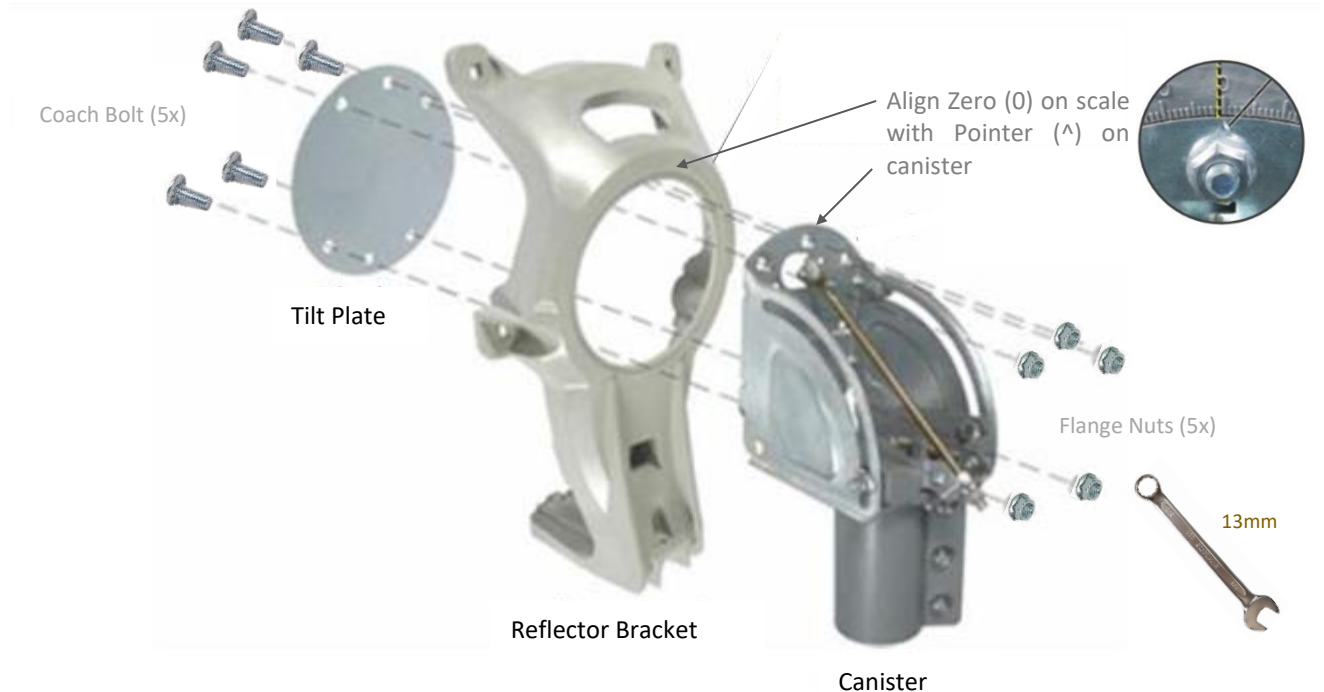

3.2 Antenna Reflector & Transceiver final assembly (74CM)

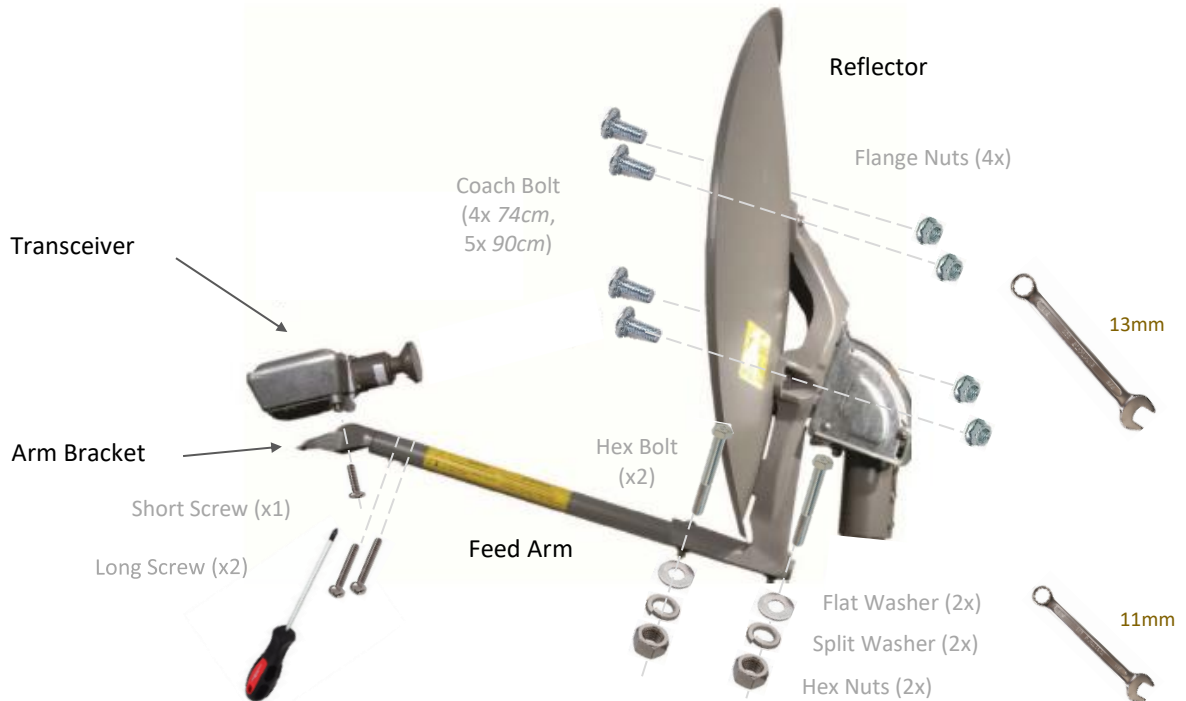

NOTE: 90cm antenna has an identical design of 74CM, except for:

- 5 Coach Bolts - instead of 4 - to fix the Reflector on its Bracket
- Arm is attached to the antenna with 2 horizontal Hex Bolts – instead of vertical – and 1 vertical Bolt with arm plate (fig 3.3)
- Arm Bracket is already fixed on the Feed Arm

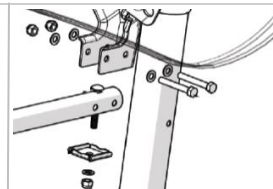


Fig.4 - TRANSCEIVER

Figure 4.1: HT3200 radio assembly



The HT3200 radio assembly includes a block upconverter (BUC), a low-noise block converter (LNB), an orthomode transducer (OMT), a feedhorn, and a Ka-band satellite Modem. The HT3200 VSAT radio assembly has the following features:

- Simple installation using a single IFL / coax cable
- Extended Ka-band frequency range support
- Electronic polarization selection capability (No manual adjustment required – do not unscrew the feed)

ATTENTION: To start Terminal programming/commissioning it is necessary that the HT3200 Transceiver and Wi-Fi Terminal WR3200 (or no Wi-Fi Terminal WE3100) **are connected through the Coax Cable. If the connection is missing the modem GUI will not appear.**

ATTENTION: Poor connectors or fixing of the coaxial cable may lead to **packet loss from 3% to 5%** into the customer equipment. A ping test to measure loss is highly advised following the activation to ensure this condition is not present

Fig.5 - IDU/ODU ASSOCIATION


ATTENTION: previous generation Jupiter2 electronics shall never be mixed with the new Jupiter3 electronics

HT2000W (IDU)



MODEM INSIDE TERMINAL

OLD TRANSCEIVER (ODU)

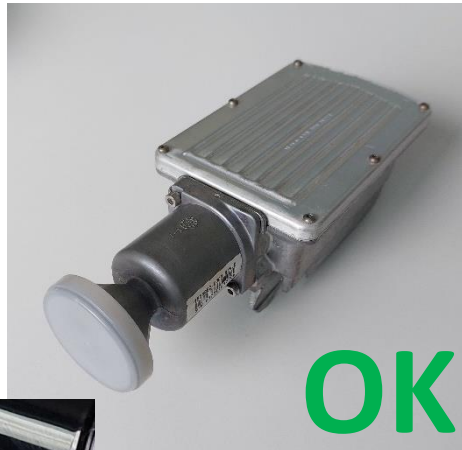

NEW TRANSCEIVER (ODU)



WR3200 (IDU) with Wi-Fi



MODEM INSIDE TRANSCEIVER

OLD TRANSCEIVER (ODU)



NEW TRANSCEIVER (ODU)



WE3100 (IDU) no Wi-Fi



OLD TRANSCEIVER (ODU)



NEW TRANSCEIVER (ODU)



MODEM INSIDE TRANSCEIVER

Fig.6 - ANTENNA CONTROL BOLTS

Figure 6.1: Antenna bolts and nuts


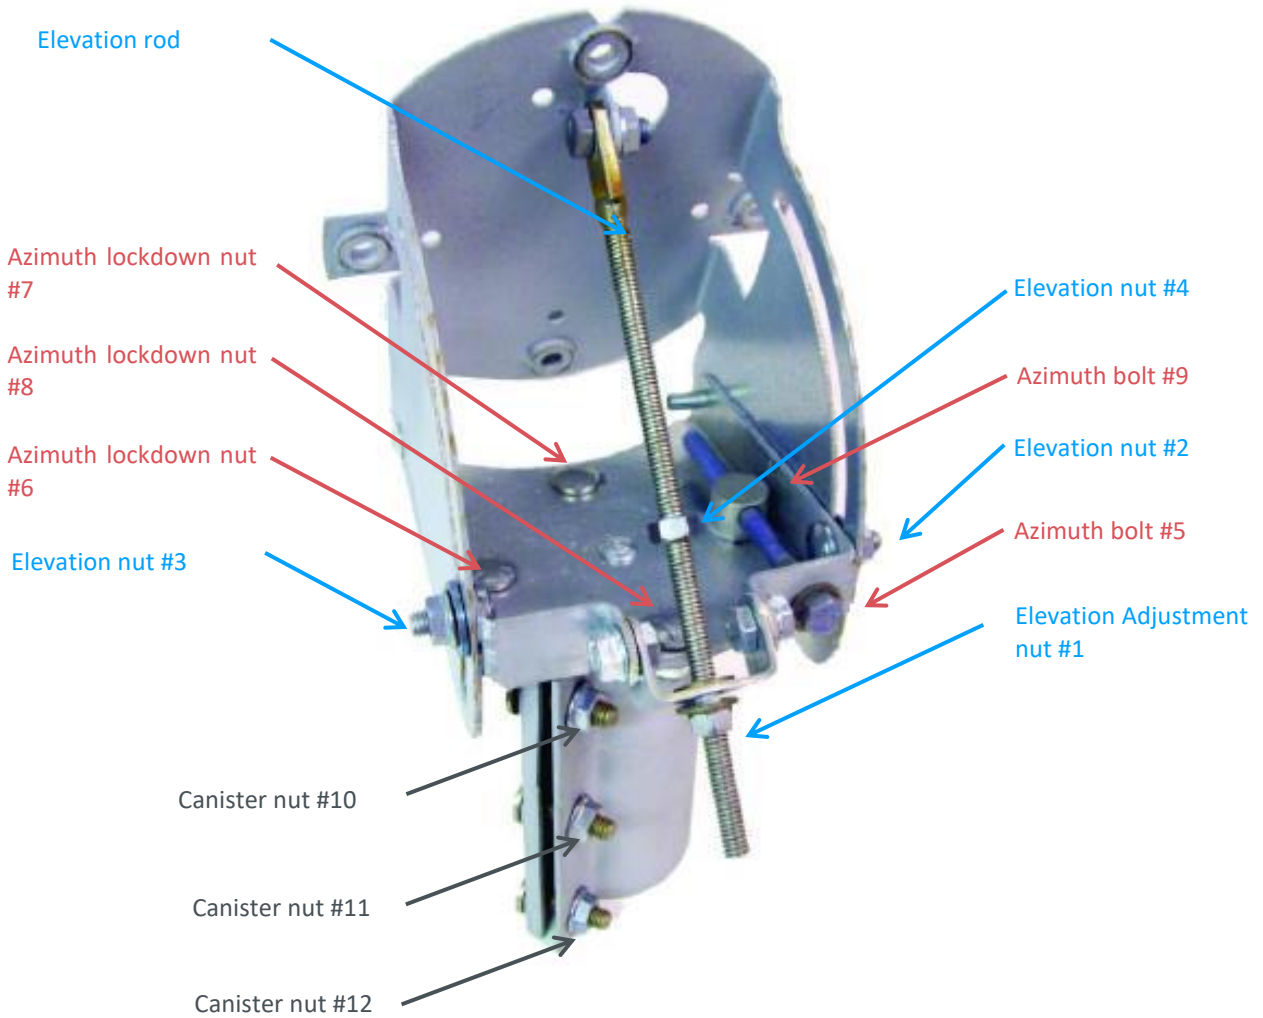


Figure 6.2: Azimuth lockdown nuts

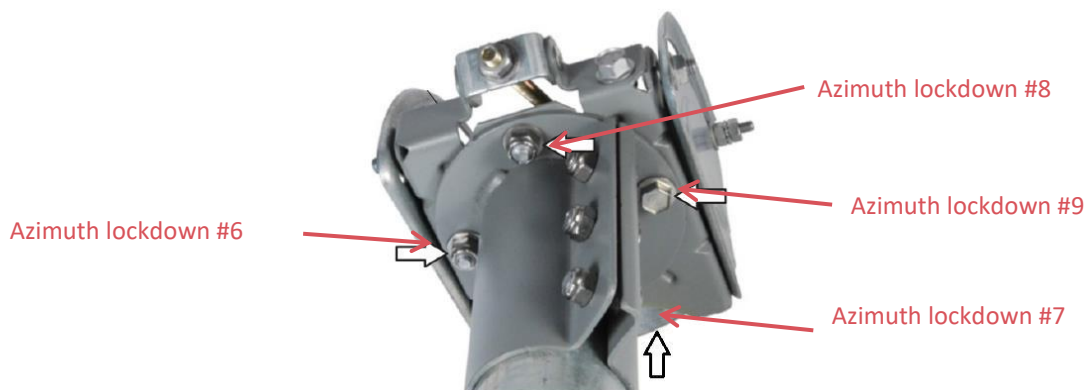

NOTE: The pole for the installation must ensure the following requirements:

- ✓ Diameter 60 mm
- ✓ Thickness 2-3 mm

INSTALLATION STEPS USING THE PC

PART 1: PREPARING THE INSTALL

Step 1: Check you have all the kit parts (fig. 1)

Step 2: Check you have all your tools to perform the installation (fig. 2)

Step 3: Check you have the **sbcs** file in your PC before you go on site to perform the install

NOTE: the sbcs configuration file is the same for all users and must be uploaded on the Terminal to provide the satellite parameters. It can be provided by your field manager

Step 4: Check you have the **Work Order** (fig. 6.3) which provides all the information to perform an install for a specific customer:

Latitude/Longitude & Beam Number of Customer Site => to program the Terminal,

Azimuth/Elevation & Sat Orbital Position => to point the antenna,

Activation Key => to activate the Terminal

The image shows a screenshot of the EUTELSAT 'Installation workorder information' form. The form is divided into five sections, each with a corresponding icon and title:

- 1. appointment information:** Includes fields for customer name, customer address, customer phone, installation date, and GPS Geolocation.
- 2. satellite:** Includes fields for satellite (pre-filled with 'CONNECT VHTS'), its polarization, orbital position, and beam.
- 3. antenna:** Includes fields for antenna size, azimuth, transceiver type, and elevation.
- 4. modem:** Includes fields for model type, latitude, longitude, and activation key.
- 5. accessories:** Includes fields for mast type, whether an NFI router is provided, and cable length.

At the bottom right of the form, it says 'It's that simple.'

Figure 6.3

PART 2: SELECTING THE LOCATION



Figure 7

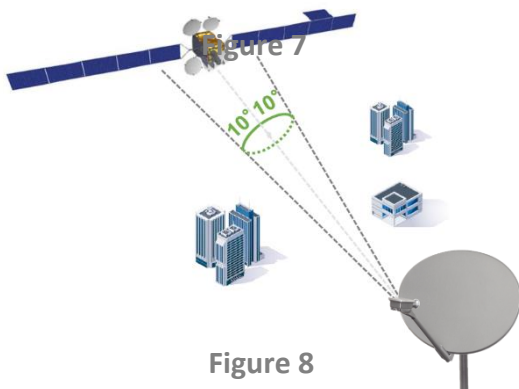


Figure 8

Step 5: Select the installation location (accessible flat rooftop or side wall south-oriented) following 5 rules:

- Clear Satellite Line of Sight,
- Solid surface for fixing the mast,
- Feasible cable route & distance (max 30m),
- Position authorized by client and easily accessible,
- Safety of the Installer

Step 6: To check the Line of Sight open the free Android or iOS App **Konnect VHTS Install** or use a Clinometer & Compass. The orbital position of KONNECT VHTS satellite is **2.7 East**.

Step 7: Select the augmented-reality function 'Sat Finder'. Move the smartphone until the red circle becomes green (fig. 7) and make sure no obstruction appears within the green circle (consider even future obstructions as growing trees)

NOTE: if use the Clinometer & Compass, get the Azimuth & Elevation values from the Work Order, and make sure the direction of the satellite is free of obstructions with an opening angle of at least 10° (fig. 8)

Step 8: Fix the mast using 5CM M8-Bolts adapted to the wall type (fig. 9). Example: Expansion / Anchor Bolts (Concrete), Rawplugs (Brick), Screws (wood).

NOTE: the Trimast allows horizontal, vertical and sloped configurations (fig. 9)

Step 9: Check with a level that it is vertical

NOTE: If you should fix the trimast on the ground please directly point the central biggest leg in the direction of the satellite, as to make the pointing step easier

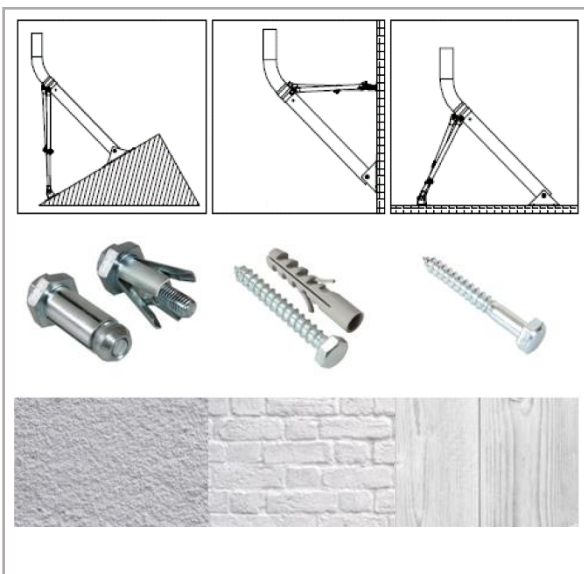


Figure 9



Figure 10



Figure 11



Figure 12

PART 3: ASSEMBLING THE SYSTEM

Step 10: Assemble the Antenna: Reflector, Canister, Arm, Bracket, Transceiver (fig. 3)

Step 11: Install the antenna on the mast and check with a level that it is vertical

Step 12: Pose the coax cable from the outdoor to the indoor of the building, preferably reusing existing cable routes (if you drill a hole, set the right sloping angle to avoid water ingress in house, and then seal it)

PART 4: CONNECTING THE SYSTEM

Step 13: Connect the Waterproof Connector (already compressed on the cable) to the Transceiver, and gently tighten it until fixed

NOTE: Under-tightening doesn't guarantee waterproofing, Over-tightening may damage the cable

Step 14: Prepare the indoor side of the cable with a cable stripper (fig.11), introduce the Push-On Connector, and connect it to the Terminal (no need of compression tool)

Step 15: Carefully tighten the connector with 11mm spanner (during this process the Push-On connector will compress on the cable)

Step 16: Plug the Terminal to the power supply

Step 17: Connect the Terminal and PC via Wi-Fi using the credentials reported on back panel of the Terminal (fig. 12). You can also connect directly with an ethernet cable

PART 5: PROGRAMMING THE TERMINAL

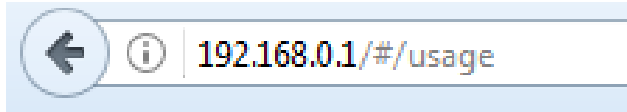


Figure 13

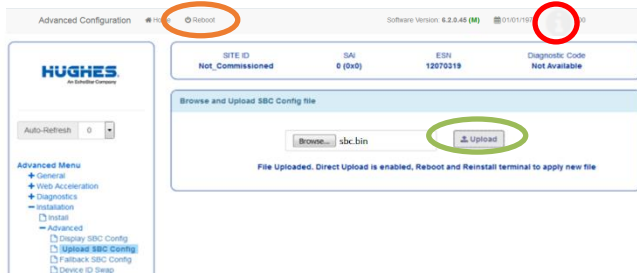


Figure 14

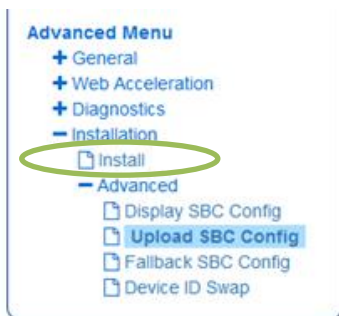


Figure 15

Latitude (DD MM.MMM):	<input type="text" value="45"/>	<input type="text" value="5.8726"/>	<input type="text" value="North"/>
Longitude (DDD MM.MMM):	<input type="text" value="7"/>	<input type="text" value="37.736"/>	<input type="text" value="East"/>
Satellite:	<input type="text" value="KVHTS-ETL"/>	<input checked="" type="checkbox"/> Beam Override	
Advanced:	User Beam: <input type="text" value="Beam 73 / RxPol RH / V08073DFCA119(R)"/>		
<input type="button" value="Submit"/>			

Figure 16

Step 18: On your PC Enable *DHCP* (flag '*Obtain an IP address automatically*') and Disable *Proxy* server (unflag '*Use a proxy server for your LAN*')

Step 19: Open a Web Browser on the PC and type **192.168.0.1** in the address field and press Enter to visualize the Terminal's homepage (fig. 13)

NOTE: select a Browser among Firefox, Google Chrome, Apple Safari. **DO NOT USE EDGE**

Step 20: Load the Sat Terminal Configuration file *sbc.bin*:

- On the top bar on the right click **'X'** icon to access the Advanced Page (fig. 14)
- On the left panel click 'Installation', 'Advanced', 'Upload SBC Config' (fig. 15)
- On the main page browse your files, select the *sbc.bin* file, click on 'UPLOAD' (fig. 14)
- Click 'Reboot' on the top (fig. 14)

Step 21: Click 'INSTALL' on the left side panel (fig. 15) to open the installation page

Step 22: Enter Latitude & Longitude (fig.16) of the installation location from your Work Order (**using Degrees and Decimal Minutes Format**).

NOTE: > If you need to convert Decimal Degrees coordinates (i.e. Google Maps) into Degrees and Decimal Minutes Format you can use <https://www.geoplaner.com/> or similar coordinates converters (see details on page 15)

NOTE: >0 Lat is North, <0 Lat is South
>0 Long is East, <0 Long is West

Step 23: Select the Satellite KVHTS-ETL. Flag **Beam Override** (fig.16) and check or select the Beam Number corresponding to the one reported in the Work Order (select the which one with "R" letter at the end). **Pay attention!** Sometimes the Beam reported in the work order is not the same as recommended from the User Interface. In this case please choose the one from Work Order. After that click **Submit**

Note: How to use www.geoplanner.com (coordinates conversion to Degrees and Decimal Minutes)

The screenshot displays the Geoplanner.com web interface. At the top, there are three coordinate input sections: UTM (32 T, 392124 x-ea, 4994738 y-no), dd.ddddd° (Latitude: 45.09788 °N, Longitude: 7.62894 °E), and dd° mm.mmm' (Latitude: 45° 5.873' N, Longitude: 7° 37.736' E). The latter is circled in red. Below these is a search bar with the text "strada pianezza 289 torino" and a "W3C/Browser -> Geolocation" button. The map shows the location of Strada Pianezza 289 in Torino, Italy, with a blue pin labeled "B". A white callout box with red text says "1 - Type the address or the coordinates of the Installation Location" with an arrow pointing to the search bar. Another white callout box with red text says "2 - Select the Degrees and Decimal Minutes format for the User Interface" with an arrow pointing to the circled coordinate input fields. On the right, a "POI / WPT / Waypoints" panel lists two waypoints: "02-B 'WP02-B'" and "01-A 'WP01-A'". At the bottom right, there are buttons for "remove 02-B", "remove all WPTS", "download WPTS", "download Route", "upload WPTS", and "upload Route".

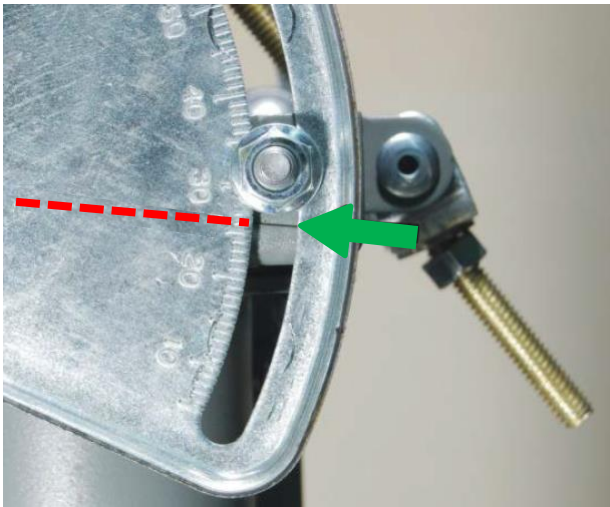


Figure 17

PART 6: POINTING THE ANTENNA

Step 24: Identify the correct elevation value (It can be provided by the Work Order or by the Konnect VHTS Install App)

Step 25: Check Elevation nuts #2 and #3 are loose and spin Elevation nut #4 until it is 5 cm up the elevation rod (fig. 6)

Step 26: Set Elevation on the Antenna with Elevation Adjustment nut #1 (fig. 6) using the Scale and Marker (fig. 17) or a digital inclinometer to better the accuracy

Step 27: Check 4 Azimuth nuts #6, 7, 8 and 9 are loose (fig. 6) and move Azimuth Adjuster bolt #5 until the fine azimuth upper bolt is centered (fig. 6)

Step 28: Check the 3 canister nuts #10-12 are loose (fig. 6)

Step 29: Visualize the SQF (Signal Quality Factor) on the Terminal page (fig. 18). The green number on the right is the current value, the blue number on the left is the max value achieved during your past measurements

Step 30: Scan the Azimuth by slowly swinging the antenna from left to right and stop when the level SQF > 40 or higher

NOTE: If you can't find the satellite repeat Step 26 & 30 optimizing the elevation until you find the satellite.

Step 31: Fix the Antenna by tightening the canisters bolts #10-12 (fig. 6) on the pole of your mast as tight as possible

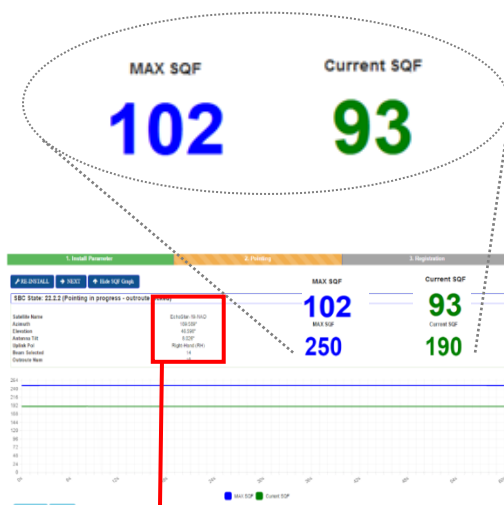


Figure 18

NOTE: Please, the value inside the red box are just suggested by the system but are not to be considered given the workorder is the file who provide the exact infos.

NOTE: In order to help the pointing the antenna is equipped with a beep sound. The beep is only an aid and has not to be considered valid to check over the pointing completed. Pointing must always be maximized via user interface on PC or App.

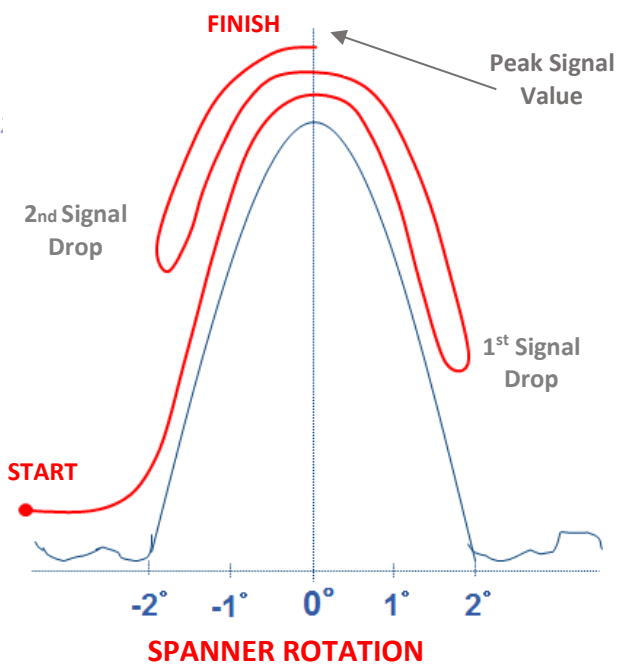


Figure 19



Figure 20



Figure 21

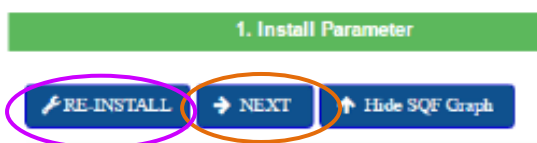


Figure 22

Step 32: Fine pointing Azimuth to maximize the signal (fig. 19):

- Rotate Azimuth bolt #5 (fig. 6) in any direction until you see on the PC the **Current SQF** value marked in green drop a first time
- Reverse the direction until you see the signal level drop a second time
- Identify the **Max SQF** value marked in blue on the PC (Peak value)
- Reverse the direction again until you reach the maximum signal level, when the current signal marked in green is equal to the max signal marked in blue (fig. 21)

Step 33: Fine pointing Elevation to maximize the signal (fig. 20):

Repeat the same procedure as Step 35 using the Elevation Adjustment nut #1 (fig. 6)

*NOTE: the scope of Fine-Pointing the antenna is to **discover the maximum value that can be achieved, and not to reach a minimum signal level.** You can repeat steps 32 and 33 to improve the accuracy of your pointing. SQF 102 is only an example, since SQF values depends on locations and weather conditions*

Step 34: Lock off the 3 azimuth locking nuts #6-9 (fig. 6)

Step 35: Lock off the 2 elevation locking nuts #2, #3 (fig. 6), and spin the elevation nut #4 until the bottom of the elevation rod (fig. 21)

Step 36: Check the antenna pointing by gently pushing & pulling at the top/left/right

Step 37: Click 'NEXT' on the top left of the Terminal webpage (fig. 22).

NOTE: If you can't click on NEXT because it is grey, it means your signal level is not sufficient to activate the Terminal and you need to click 'RE-INSTALL' and improve the antenna pointing starting again from Step 24 [if you don't succeed and if requested by your escalation level, re-pointing should start from Step 23 trying one by one the listed beams in the Beam Override window, and finally selecting the one with highest SQF]

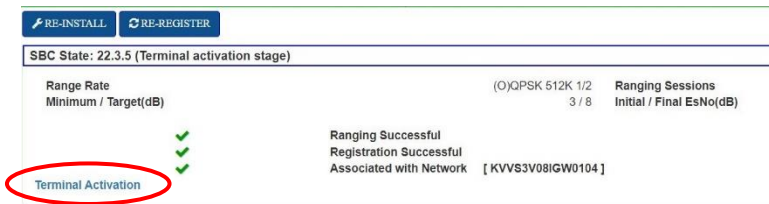


Figure 23

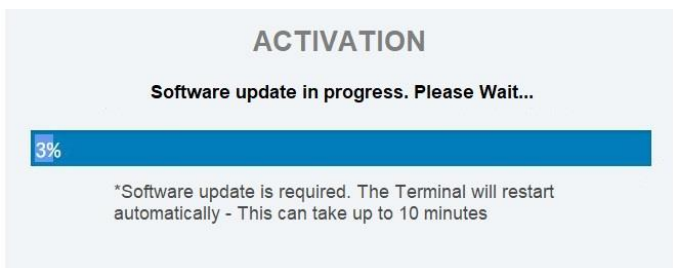


Figure 24

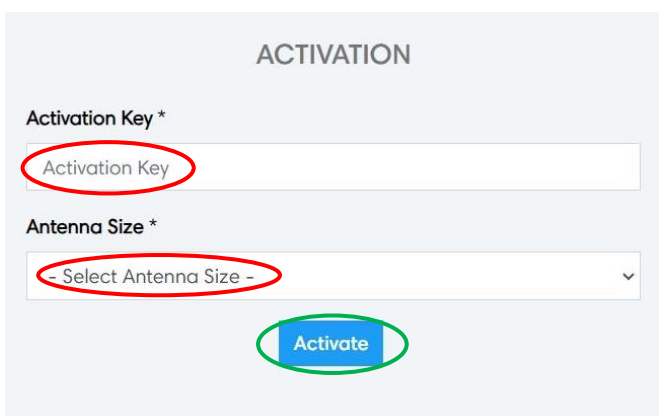


Figure 25



Figure 26

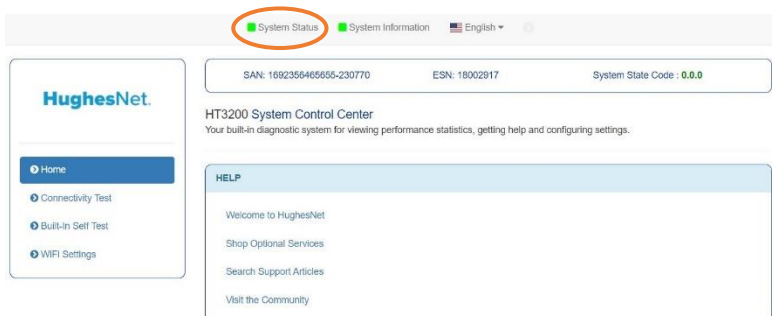


Figure 27

PART 7: COMMISSIONING THE TERMINAL

Step 38: When the Terminal starts the Registration no action is needed, just verify the 3 steps have **green flags** (fig. 23)

Step 39: Click '**TERMINAL ACTIVATION**' and start the Self-Activation phase (fig. 23)

Step 40: The software will be automatically updated (fig. 24)

Step 41: You will now be redirected to the Activation Portal where you can start activation (fig. 25)

NOTE: If you aren't redirected to the Activation Page type on your browser: activation.eutelsat.com

*If you are still not able to access it reboot your PC, and/or go to Start, type **CMD**, then type the commands: **ipconfig /release** and then **ipconfig /renew**. Then type again the Activation Page URL in your browser*

Step 42: Enter the **Activation Key** reported in the Work Order, **Select Antenna Size** and click '**ACTIVATE**' (fig. 25)

NOTE: if the antenna size is not displayed, select the Antenna Size of your installation

Step 43: Wait for the popup message **Activation Success!** (fig. 26). Repeat Step 41 in case of failure

*NOTE: if an error message is displayed related to an insufficient signal level, improve your pointing starting from **Step 22**. if you can't improve it, please refer to your escalation channel*

Step 44: Go back to the Terminal GUI and check on **System Status**, on the top left bar of the Terminal GUI, is **flagged in green** – fig. 27)

NOTE: if there were problems with reloading the page restart the terminal (On/Off) and try to reload it

Step 45: Use the following link for a reliable Speed Test via satellite:

<https://speedprobe.konnnect.com>

PART 8: WI-FI CONNECTIVITY

Step 46: Present to the client how to access the Wi-Fi network, using the parameters shown on the sticker on the back panel of the Terminal (fig. 28):

- The SSIDs and password listed are just one per each (No 2,4 and 5 GHz)
- Using the customer device to pair, search for either wireless network matching these SSID.
- Connect to the network.
- Enter the **Password** (fig. 28).

NOTE: it is possible to manage Wi-Fi Terminal functionalities, typing 192.168.42.1 into the web browser connected (wirelessly or via LAN cable) to the Terminal, by following the steps below:

- Click the **Wi-Fi Settings** (fig. 29)
- Enter the default password: “is the password wrote on the back of the terminal. For example store31sing (fig.28)”
- Click the LOGIN button

The Wi-Fi Settings home screen allows optional features like (a) Change the SSID Wi-Fi Network Names and Password, (b) Change the default login password by selecting on the left panel ‘Administration’ and ‘Password Settings’, (c) Disable Wi-Fi by unchecking “SSID enable” for each tab (d) View which devices are connected, etc.



Figure 28



Figure 29

INSTALLATION METHOD USING THE APP

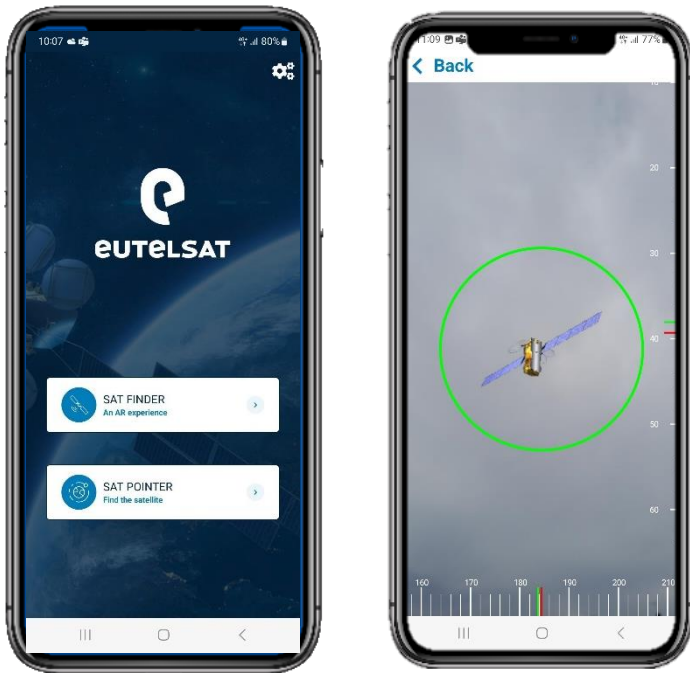


Figure 30, 31

Downloading the App

Konnect VHTS Install is a free-of-charge App that allows installers to Program, Point & Activate a Konnect VHTS system simply using a smartphone or tablet instead of a PC



Connecting to Wi-Fi

To use the SAT POINTER, activate the Wi-Fi on the device settings and choose the Wi-Fi network of the WR3200 Terminal using the credentials reported on back panel (fig. 12). A small router symbol on the top right of the App will become green to indicate the connection with the Terminal is On (fig. 32)

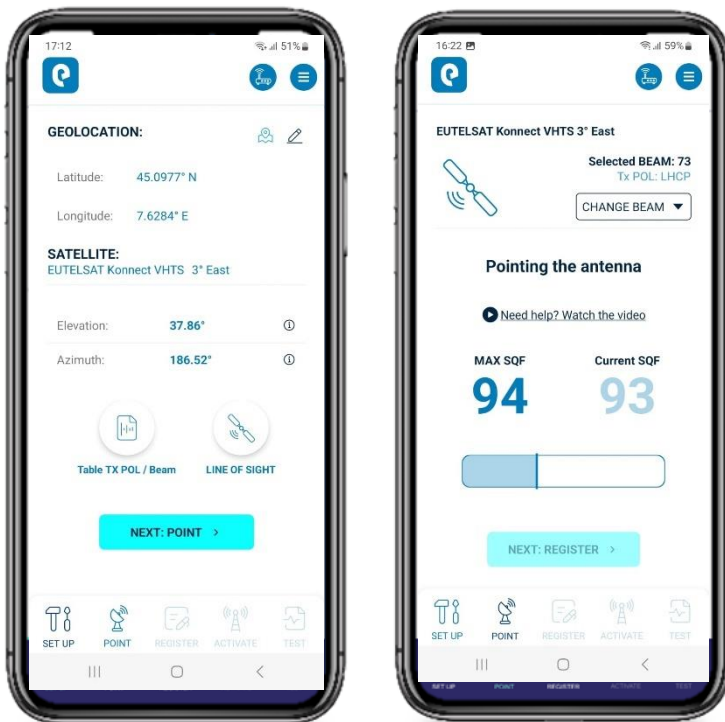


Figure 32, 33

FINDER

Click on the App home page SAT FINDER to check the Satellite Line of Sight with the augmented reality tool (fig. 30, 31). This function is accessible without Wi-Fi connectivity to the Terminal.

SETUP

Click on the App home page SAT POINTER, note the antenna Elevation Value, then click 'NEXT: POINT' to enter the pointing mode to visualize the SQF (Signal Quality Factor) in real time. Concurrently the App will automatically (1) load the Terminal Configuration file *sbc.bin* stored in the App, as shown by the confirmation message 'The Terminal SBC file is up to date', and will automatically (2) program the Terminal using the Latitude/Longitude data from the GPS (fig. 32).

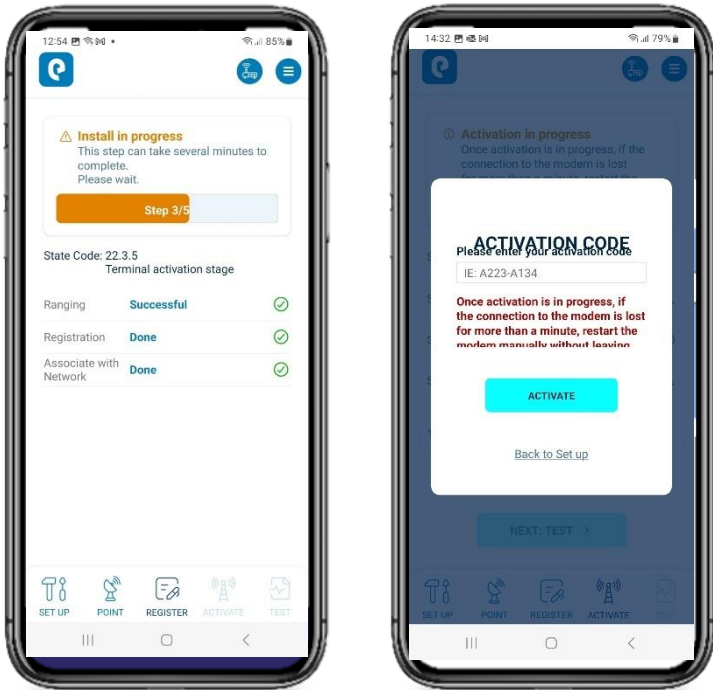


Figure 33, 34

POINT

Verify 'Selected BEAM' value (fig. 32) corresponds to the Beam reported in the Work Order, in case you need to change it click on 'CHANGE BEAM'. You can now point the antenna following the same process described in PART 6: POINTING THE ANTENNA, starting from STEP 24. The App will display the Current and MAX signals level SQF in real time to allow an optimal pointing process. Once you have finished pointing, click on 'NEXT: REGISTER' (fig. 32).

REGISTER

On the REGISTER tab wait a few minutes until the modem completes the 3-step registration phase and 3 green flags appear (fig. 33). Click on 'NEXT: ACTIVATE'

Before to enter the activation key the system will be automatically updated (It can takes until 10 minutes)

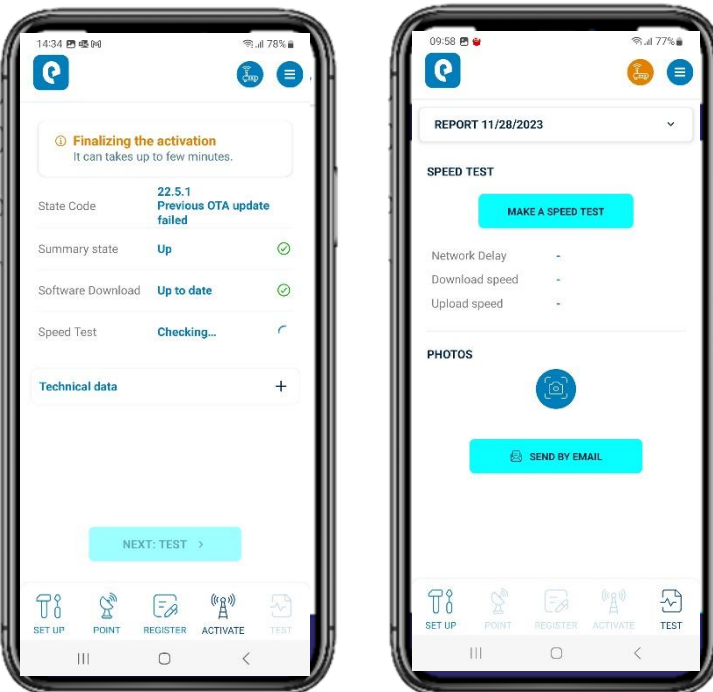


Figure 35, 36

ACTIVATE

Enter the Activation Key reported in the Work Order and select the Antenna Size of your installation (fig. 34). Click 'ACTIVATE' and wait for the message 'Activation Successful'. Repeat this step-in case of failure. Wait 5-10 minutes and check 'Software Download Status' is flagged in green and is 'Up to date' (fig. 35)

TEST

To perform a Speed Test via satellite, click 'MAKE A SPEED TEST'. You can also upload your install photos on the PHOTO section of the TEST tab to allow the generation of an automatic Installation Report which includes the technical parameters of your install as well. Click on 'SEND BY EMAIL' (fig.36) to send via satellite the Installation Report. You can edit your email address on the Settings page on the top right

ANNEX

1. Terminal Swap Procedure

The Terminal Swap Procedure allows the replacement of a faulty Terminal. A Work Order will be issued to provide all the necessary parameters and information, no need for a new Activation Key. The installer shall use the old one. The following process must be implemented:

- Connect the new Terminal (Tria) to the antenna coax cable and plug the Terminal to the power supply.
- Program the Terminal following all the steps of PART 5, including loading the sbc file {NOTE: enter the same Latitude and Longitude data (Step 22) used during the first install and reported in the Work Order}
- Check antenna pointing is correct by visualizing the SQF (Step 31) and click on NEXT (Step 39)
- Commission the Terminal following all the steps of PART 7

NOTE: generally, there is no need to repoint the antenna, but if the SQF signal check shows an insufficient level, it is recommended to improve the pointing according to the steps of PART 6

2. Relocation Procedure

The Terminal Relocation Procedure allows to relocate a terminal (within one Beam or from one Beam to another) in case a customer changes address. A Work Order will be issued to provide all the necessary parameters and information. The installation process remains the same, with the exception that there is no need to start the Self-Activation phase and enter the Activation Key (Steps 41 to 44), since the process stops at the Registration Phase (Step 38) which in the Relocation case is composed of 5 Steps (Fig.23) instead of 3 (Fig.26) and ends with the message *Installation Completed!!!*

SBC State: 0.0.0 (Fully operational)	
Range Rate	QPSK 512K 1/2
Minimum / Target(dB)	5.1 / 5.8
Ranging Sessions	3
Initial / Final EsNo(dB)	18 / 5.8
✓ Ranging Successful	Done
✓ Registration Successful	Done
✓ Associated with Network [ALB14HNSIGW11A001]	Done
✓ Configuration Downloaded	Done
✓ Installation Completed!!! [SAI 12685]	Done

Figure 37

NOTE: Terminal Swap and Relocation are operations that cannot be concurrently performed. It is necessary to complete them in two separate steps: or perform the swap of the Terminal and then proceed with the Relocation or complete the Relocation with the old terminal and after that proceed with the Terminal swap.

3. Troubleshooting Table

The Jupiter terminal state code provides a concise indicator of error or marginal conditions (states) when the terminal is not operating in a fully operational and healthy state. Check it on **System Status** (click on the top right bar of the Terminal GUI, 192.168.0.1), or during the Pointing and Registration phases (Fig. 17 and Fig. 23), following the table below:

ERROR CODE & MESSAGE		PROBLEM	RESOLUTION
22.3.11	Unable to transmit successfully to the Gateway	This problem occurs generally when the BUC of the Transceiver doesn't work properly	Replace the Transceiver
30.1.1	Web Acceleration in backoff state	When this issue occurs, the ping reply time increase and you can also observe repeated micro cuts of the connection	Go to the Terminal GUI click on 'i' on the top right next to flag (fig.14), then on the left page click on 'Web Acceleration', click on 'Control' and finally click on 'Resetting' on MBX Reset window
3.1.1	Satellite cable appears to be unplugged or broken	You can see that the receiver led is off on the Terminal front panel	Check if the cable is correctly connected between to Terminal and the transceiver. Check if the cable or connector isn't damaged and replace them if necessary. Start investigation on the installation integrity, possibly requiring to repoint your antenna
22.3.24	Registration failed because terminal move not allowed	The terminal is attempting to Re-Register with a different terminal location, but a 'Move Allowed' has not been configured on the platform. This problem can also occur if are changed the Lat/Long coordinates (Step 24) of a Terminal already activated.	Either correct the terminal location to match the original values or escalate to determine why a move is not allowed
22.3.14	Registration failed because terminal failed to resolve NMS address	This problem occurs when the Terminal already commissioned presents an intermittent terminal issue	Reboot the Terminal until the unit goes back online correctly with a good NMS address resolved
21.2.11	Associated with Wall Garden IPGW due to Billing suspension	This message (because has not to be consider as an error) appears during the activation of a Tria that has been already activated at least once.	The message just show that the Tria is ready for the activation. The installer must insert the new Activation Key as to let the system come back online
N/A	File Upload Rejected – Not more recent	The terminal has an embedded sbc file that is more recent than the file that the engineer is trying to upload	The Engineer must upload the most recent sbc file available released. The problem is caused by the obsolescence of the previous sbc file